

WILDCAT *CARTS*

OWNER'S MANUAL



Cougar MC 150

Welcome

Congratulations on becoming an owner of a Wildcat Cart. You are on your way to playing a more relaxed game of golf. The “Cougar Series” represents excellent quality, design and engineering.

Please take some time and read this manual carefully so you will get the most benefit from your Cougar power walking golf cart. If you have any problems or queries, please contact us at our Customer Service Hotline – 1-866-788-2278.

Enjoy your new Cart.....

And Shoot lower scores.....

Wildcat Carts Management Team

Safety Tips

1. Do not drop or damage the fully sealed batteries, as they contain acid which will burn the skin and could cause blindness. Never attempt to open the battery case or incinerate the battery.
2. Always charge the batteries in a well ventilated area. During normal use, the battery is effectively sealed, and practically no gases or acid escape from the case, making it very safe. If the charger or battery malfunctions, then an explosive gas may be released.
3. Keep the battery away from sparks and flames, and from dangerous chemicals.
4. Always switch the power off before connecting or disconnecting the charger.
5. Check to make sure all nuts are tight before you use your cart.
6. Do not put anything metal near the terminals, there will be a risk of fire or explosion.

In operation, ensure that the cart is under your control at all times. If it is allowed to collide with other people or property, injury or damage may occur.

GOLF CART SKETCH MAP



WILDCAT CARTS

For Customer Service Call our Hotline – 866-788-2278

GOLF CART INSTALLATION



Cougar MC150



Remove cart from carton.
Open battery and connect
the battery wire



Unfold the cart



Unfold the lower joint



Unfold the upper joint



Extend the lower and
Upper bag supports



Put battery onto holder



Fasten the battery strap



Connect battery to the
Power cord on the cart



Turn the accelerator knob
to open the power



Turn the accelerator knob
counter-clock wise to
power down



Golf cart travel bag

ASSEMBLY

Your Wildcat golf cart model Cougar MC150 comes fully assembled. Carefully remove your golf cart from the shipping carton. Keep carton in a safe place.


1. Before using your electric golf cart, ensure the battery has been fully charged. Battery needs to be charged for at least 24 hours before initial use.
2. Unfold the handle into the operating position until it's interlocked in position.
3. Place the battery into the battery's tray, and plug the battery cable into the carts power cord.

OPERATION

1. Fully charge the battery before playing a round of golf. (24 hours initial charge time)
2. To unfold the cart you must pull the V-shape latches away from each other and pull the handle up into operating position.
3. Install the battery onto the battery tray on cart.
4. Ensure the speed knob is all the way down in off position.
5. Connect the battery to the power cord of the cart.
6. Grasp the cart handle, switch power to "ON" (green button). Rotate speed control clockwise until the cart begins to move.
7. Continue to rotate the speed control until the desired speed is attained.
8. To stop the cart, rotate speed control in a counter clockwise direction, or switch the power to "OFF" (to the left) position.
9. After each round, disconnect the battery from the cart and return the battery to the charger. Ensure the charger is plugged into the power outlet and leave the battery charging until the next time it is required.

Note: Never leave the battery in an uncharged condition or use a battery that is not fully charged. These practices will severely shorten the service life of the battery.

ELECTRICAL WIRING DIAGRAM

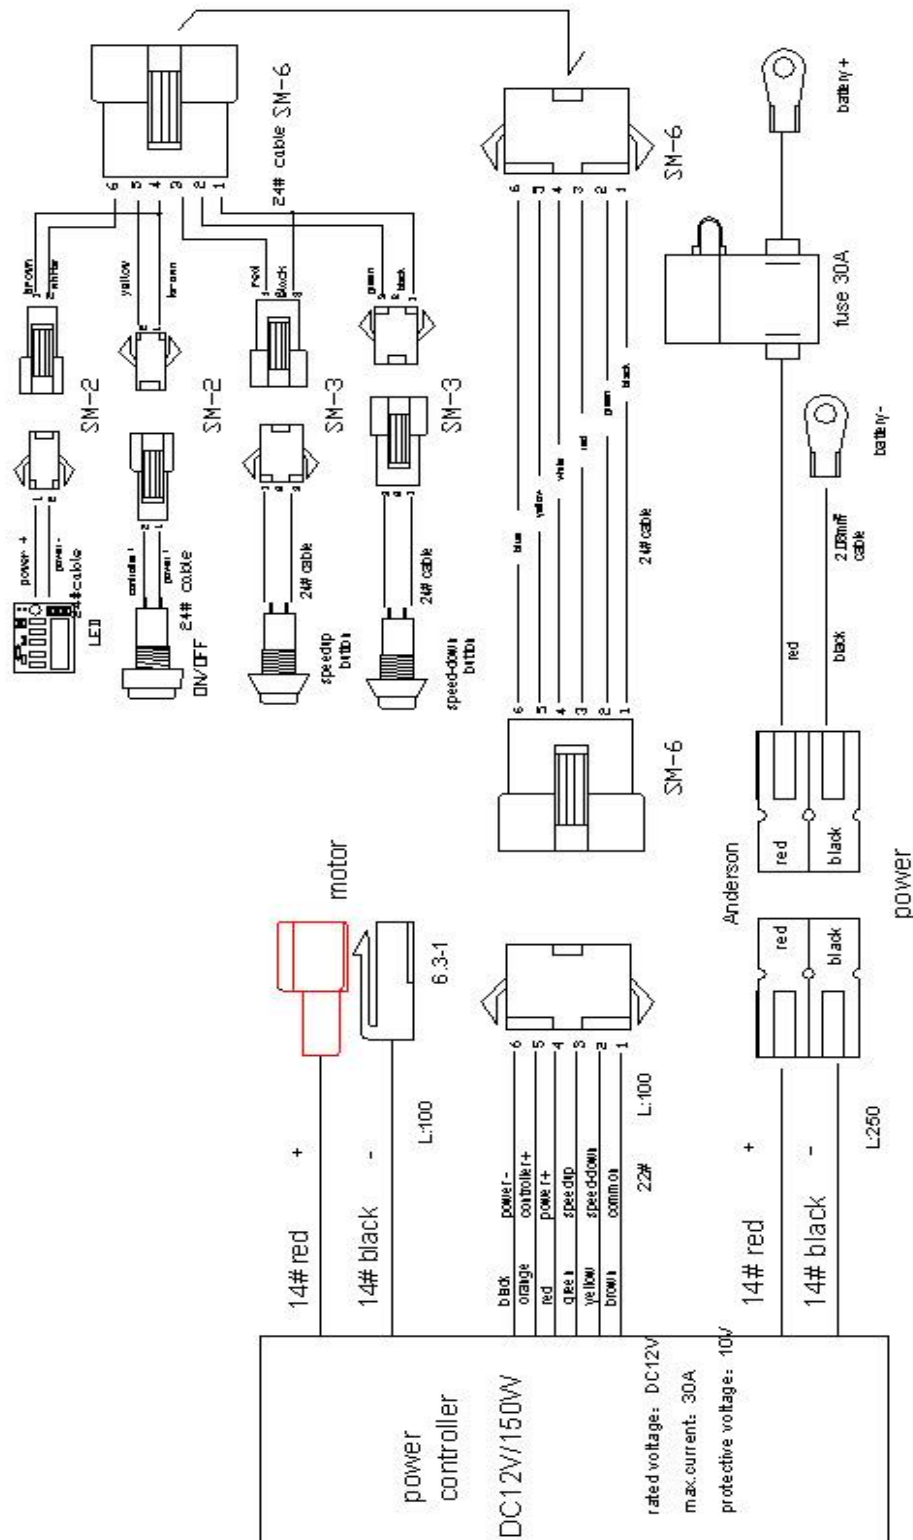

MAINTENANCE

General:

Clean off excessive dirt after each time the cart is used.

Wipe over with damp cloth.

Make sure to clean the wheels thoroughly.

Battery:

Always recharge battery after each use.

Do not charge battery in temperatures exceeding 30 degrees Celsius (86 degrees Fahrenheit).

Charge battery for a period 6-8 hours until fully charged and always leave the battery connected to the charger when not in use.

PRECAUTIONS

Do **NOT** sit on the cart frame or unit.

Keep the battery away from children.

Never place battery in or near a fire.

Never short the terminals.

Make sure to check that the speed knob is all the way down (in off position) before pressing the green button (power button) on the handle.

WILDCAT CARTS

For Customer Service Call our Hotline – 866-788-2278

SPECIFICATIONS

Basic Functions & Specifications:

Model No.:	Cougar MC150
Material:	Aluminum
Full Dimensions(Inches):	50*23*32
Folded Dimensions (Inches):	33*24*14
Max Speed (Miles):	4MPH
Net weight:	31 LBS
Gross weight:	41 LBS
Distance Per Charge(KM):	9.5 Miles
Tire:	Airless Tire

Charger:

Model No.	Input	Output
LC1-12A-3A	AC110-230V,50-60HZ	12V3A

Motor:

Spec:	Voltage	Current	Power
12V150W	12V	12.5A	150W

Battery:

Model No.	Capacity	Voltage	Weight
DJW 12-20	20AH	12V	6.0KG

WILDCAT CARTS

For Customer Service Call our Hotline – 866-788-2278

LET'S WALK and ENJOY THE GAME
“the way it was meant to be played”

CAUTION: Read and understand this
manual thoroughly before
operating the cart.

WILDCAT CARTS
For Customer Service Call our Hotline – 866-788-2278